

The engine serial number and model number are stamped on the cylinder block in the following locations (as viewed from the flywheel end): The left side, upper front corner of current 6V and 8V cylinder blocks (Fig. 4) and the right side, upper rear corner of current 12V and 16V blocks and *former* 6V and 8V blocks.

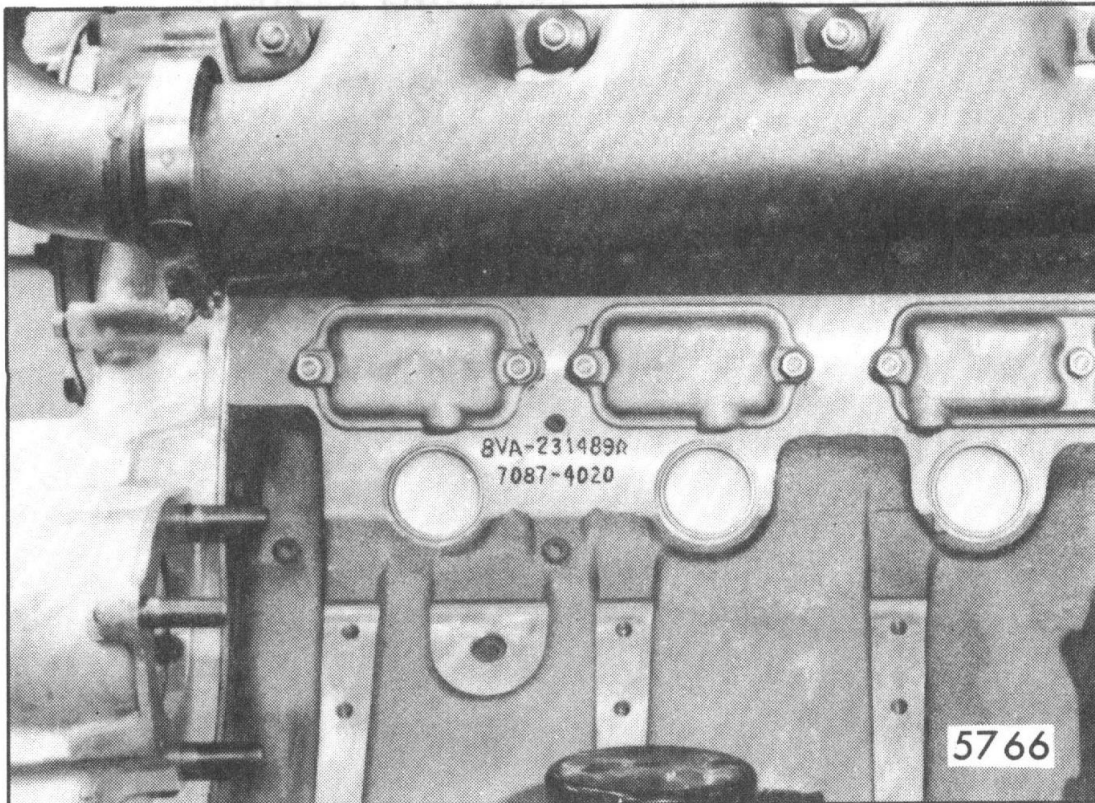


Fig. 4 – Typical 8V-71 Engine Serial Number and Model Number